

[034Motorsport C8 RS6 Carbon Fiber Engine Cover Trim](#)**034 MOTOR SPORT**

034Motorsport's Carbon Fiber Engine Cover Trim for the C8 RS6 is the new standard in understated beauty. This cover trim was engineered with long lasting great looks in mind. Manufactured from carbon fiber, for strength, light weight, and long-lasting great looks.

Installation Spiciness Rating: PLAIN

Installation of your 034Motorsport Carbon Fiber Engine Cover Kit is a straightforward process that should take approximately 20 minutes to complete.

Supplied Parts:

- (1x) 034Motorsport CF engine cover (left)
- (1x) 034Motorsport CF engine cover (right)

Tools Needed:

- Isopropyl alcohol
- Rag

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com


About This Guide

This Install Guide documents the installation process on an C8 Audi RS6. There may be minor differences depending on specific vehicle, market, options, etc.

Install Steps


Step 1

Open your hood to access the engine cover.

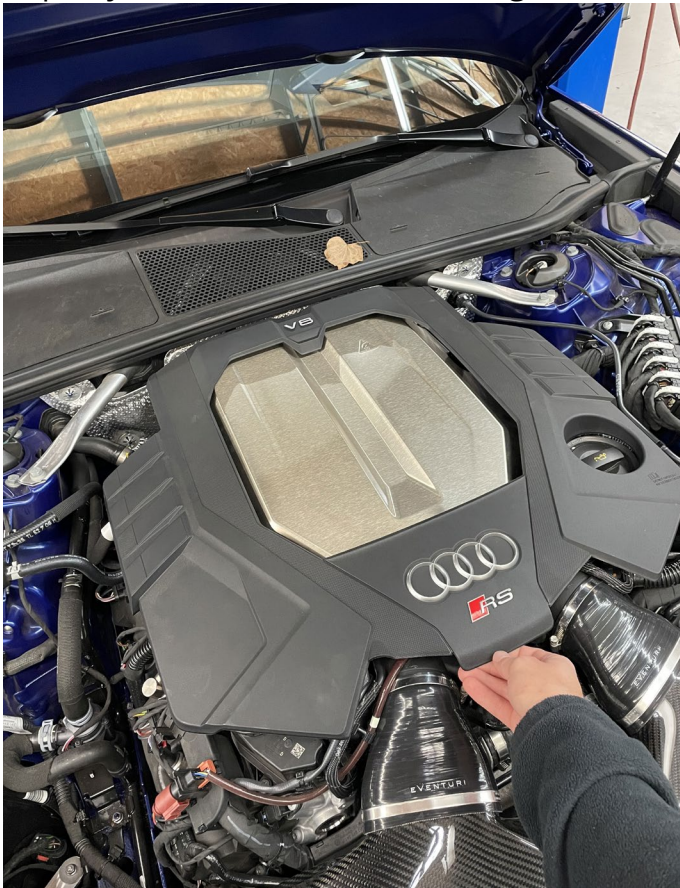

Step 2

Remove the engine cover.

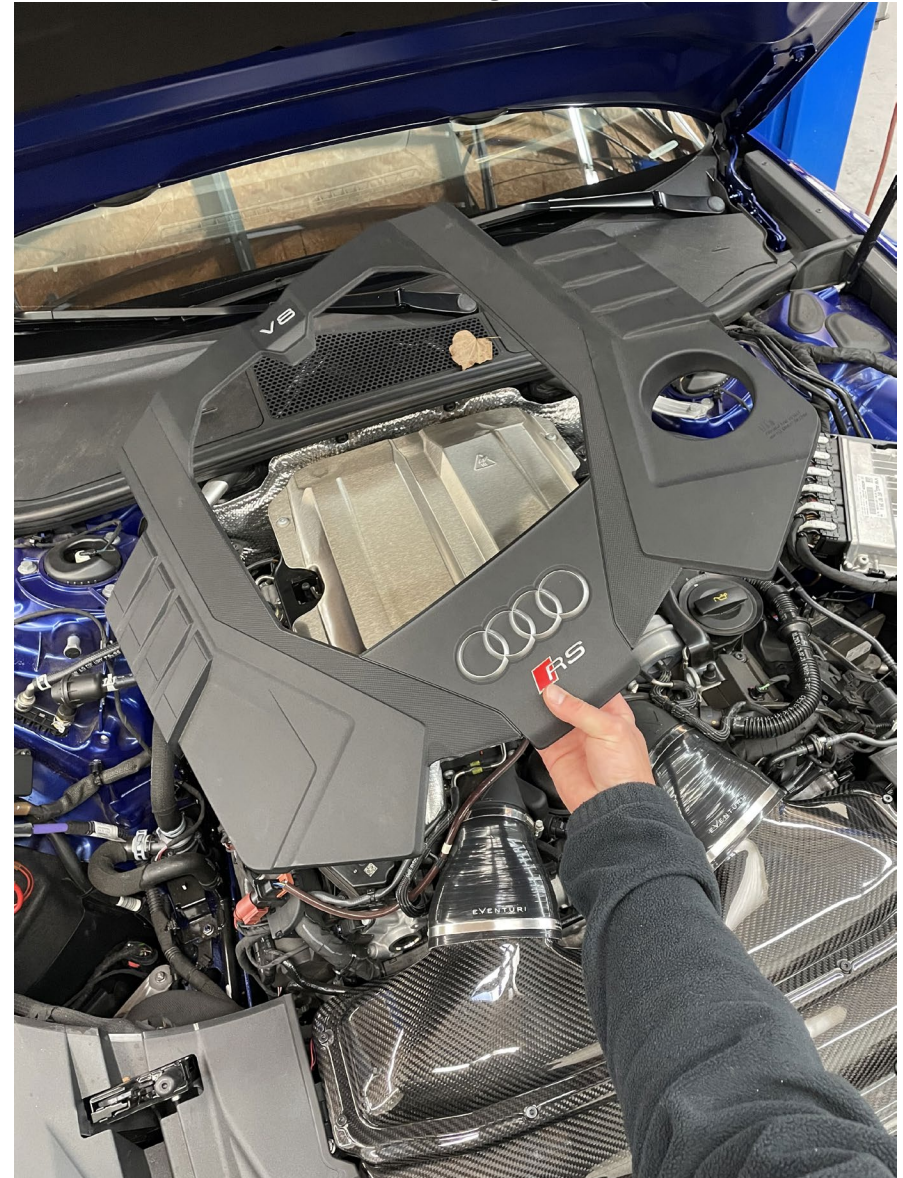

Step 3

Using a rag and a liberal amount of isopropyl alcohol, remove any dirt, oil, and particularly engine dressing compound from the engine cover. This may require multiple rounds. Let it dry for a few minutes before moving on.

**Step 4**

Remove the backing to the adhesive tape and apply the inserts to the engine cover. The minimum application temperature is 50 degrees Fahrenheit (10 degrees Celsius).



Step 5

Repeat this process for the other side.



Step 6

Reinstall your engine cover and you're done! Enjoy.

