

RES-X RESONATOR DELETE AND X-PIPE, B9 AUDI SQ5 3.0 TFSI



The 034Motorsport Res-X Resonator Delete and X-Pipe for your B9 Audi SQ5 3.0T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family hauler.

This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location.

Installation Spiciness Rating: MEDIUM



Installation of your 034Motorsport Res-X is a straightforward process that will take approximately two hours to complete.

Supplied Parts:

- (1x) 034Motorsport Res-X
- (2x) exhaust clamps

Tools Needed:

- 13mm Socket
- Sawzall
- Exhaust Hanger Pliers
- Safety Glasses
- File
- Marker

About This Guide

This Install Guide documents the installation process on an B9 Audi SQ5. There may be minor differences depending on specific vehicle, market, options, etc.

Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

Installation Steps

Step 1

Raise the vehicle securely on jack stands, or a lift, to gain access to the underside of your car.



Step 2

Disconnect the exhaust valve connector.



Step 3

Using an 13mm socket, loosen the forward exhaust clamps.



Step 4

Using exhaust hanger pliers, separate the front hanger from the bushing.



Step 5

Using exhaust hanger pliers, separate the middle hanger from the bushing.



Step 6

Using a 13mm socket, remove the rear exhaust hanger hardware.



Step 7

Remove the rear exhaust section and clamps from the underside. Set aside the clamps for later.



Step 8

Lay the 034 Res-X on top of old exhaust and mark a cut line. It helps to cut an extra 1/4" - 1/2" to give adjustment later.



Step 9

Use your preferred cutting tool to cut the old exhaust along the marked line.



Step 10

Use a file to deburr the cut on the stock exhaust.



Step 11

Install the stock rear exhaust section by using a long 13mm socket to install the rear bolts. Use a jack to hold the front of the exhaust.



Step 12

Reusing the stock exhaust clamps, slide them onto the stock downpipes.

Step 13


Slide the provided exhaust clamps onto the stock rear exhaust.

Step 14

Hang the 034 Res-x by installing the two hanger rods into their respective bushings.

**Step 15**

Slide the clamps over the ends of 034 Res-X. It helps to use a pole jack or a second person to hold the segments while you tighten the clamps. Make sure everything lines up to clearance the chassis and chassis brace.

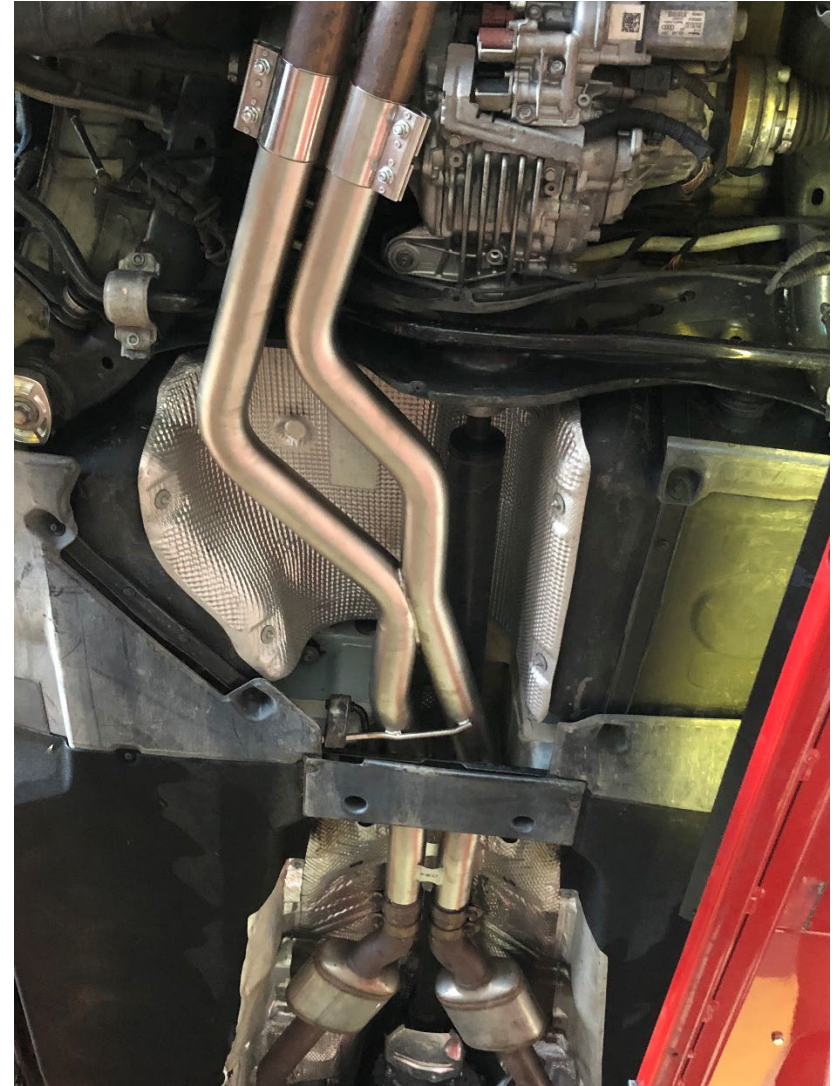

Step 16

Once you like the fitment, tighten up all the clamps using a 13mm socket.



Step 17

Reconnect the exhaust valve connector.



Step 18

Lower the car back down.



Step 19

Enjoy your new exhaust sounds.

