

## B8/8.5 S/Q5 Res-X

**034 MOTOR SPORT**

The 034Motorsport Res-X Resonator Delete and X-Pipe for your B8 Audi SQ5 3.0T unleashes a throaty growl and exotic tone that exudes the sound of performance and warns bystanders that this isn't your average family sedan.

\*This job requires cutting the stock exhaust. Be sure to double check that your cut line will match the factory tip location

## Installation Spiciness Rating: Mild



Installation of your 034Motorsport Res-X is a straightforward process that will take approximately one hour to complete.

### Supplied Parts:

- (1x) 034 Res-X Mid-pipe
- (2x) Exhaust Clamps

### Tools Needed:

- 13mm socket
- Pole Jack
- Sawzall
- Safety glasses
- Marker

### About This Guide

This Install Guide documents the installation process on an B8 Audi SQ5. There may be minor differences depending on specific vehicle, market, options, etc.

### Getting Started


Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

**\*Allow car to cool off before starting\***

#### Step 1

Raise the vehicle securely to gain access to the underside of your car.

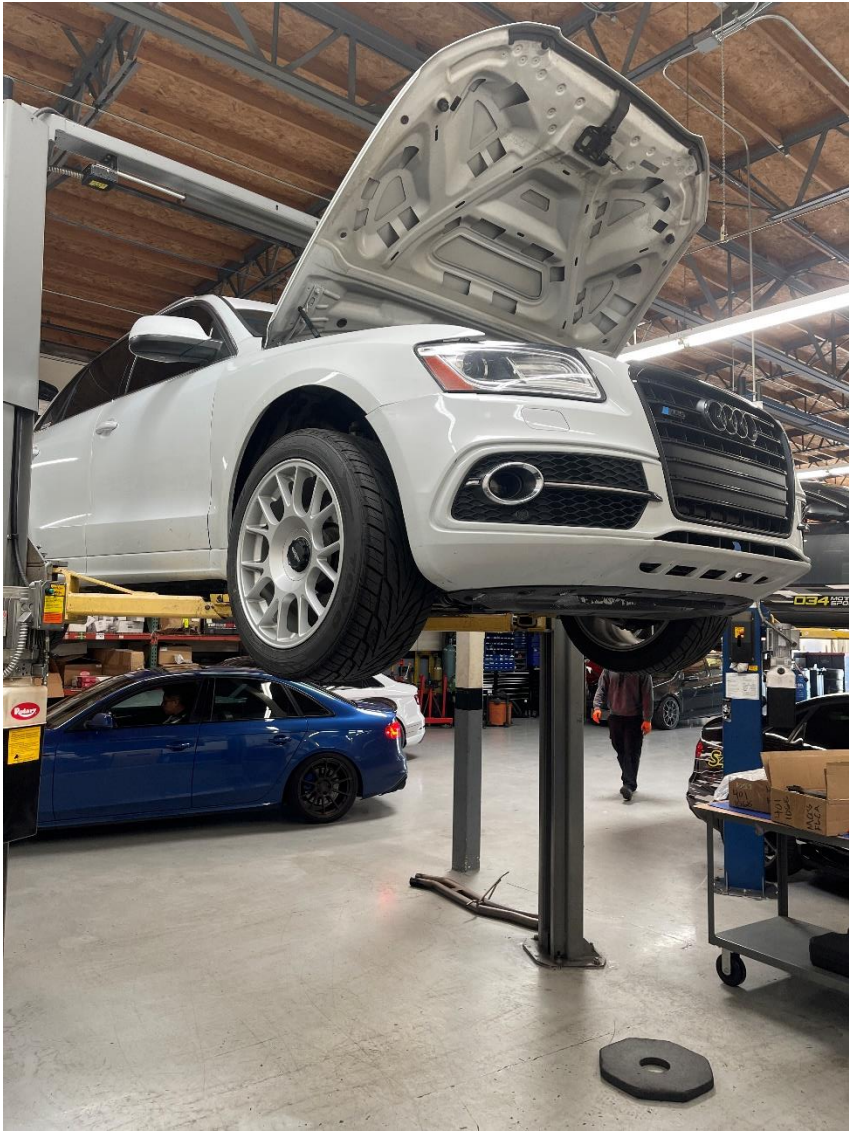

#### Step 2

Place the new Res-X mid-pipe under the factory unit as a reference for where to cut. Make a mark on each of the stock resonator pipes where the 034 Res-X terminates.



#### Step 3

Carefully make your cuts. Protect those eyeballs!  
(B9 S4 exhaust shown here, but same idea)



**Step 4**

Use a pole jack to support the rear muffler section of the exhaust.

**Step 5**

Using a 13mm socket, loosen the exhaust clamps. Slide the stock exhaust clamps onto the ends of the mid-pipes.

**Step 6**

Remove the resonator section from the stock rubber exhaust bushings.

**Step 7**

Slide the provided exhaust clamps onto the back end of 034 Res-X.

**Step 8**

Insert the 034 Res-X exhaust hangers into the rubber bushings.


## Step 9

Using a 13mm socket, tighten the stock exhaust clamps to secure the mid-pipes to the 034 Res-X.



## Step 10

Using a 13mm socket, tighten the provided exhaust clamps to secure the rear muffler to the 034 Res-X.

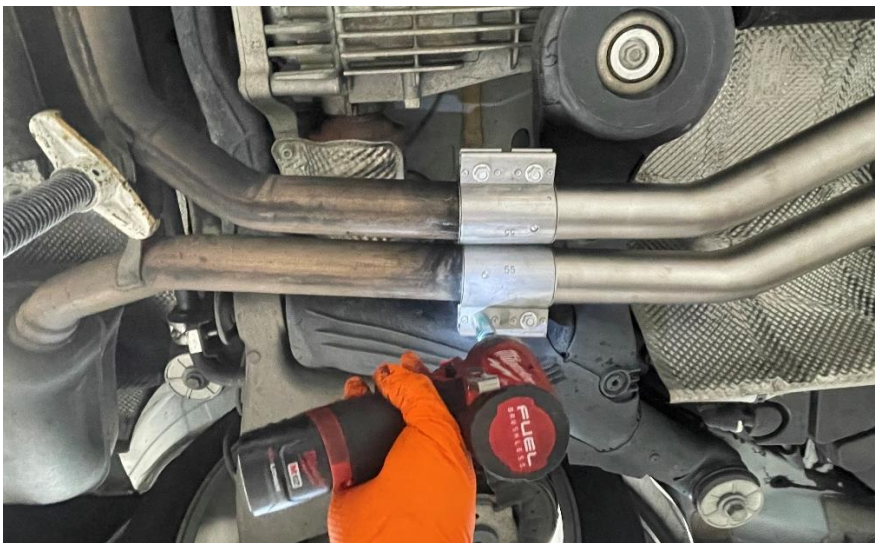

## Step 11

You are done. Remove the pole jack, lower the car, and enjoy the upgrade!

