

1.8T Coil Bolt Down Kit**034 MOTOR SPORT**

034Motorsport's Coil Hold Down Bracket Kit for the 1.8T 20v motor is the new standard in performance meets beauty.

This kit was engineered for a simple, yet beautiful installation, with motorsport quality billet aluminum parts and stainless steel hardware, for long lasting reliability and great looks.

**Installation Spiciness Rating: MILD**

Installation of the 034Motorsport Coil Hold Down Bracket Kit is a straightforward process that will take approximately 30 minutes to complete.

**Supplied Parts:**

- 034Motorsport Coil Hold Down Bracket
- (4x) 034Motorsport Coil Adapters
- (8x) Billet slider guides
- (8x) M6x60 Button-head bolts
- (8x) Springs

**Tools Needed:**

- 10mm Socket
- 4mm Allen bit
- Flat-head screwdriver

About This Guide

This Install Guide documents the installation process on a B6 Audi A4. There may be minor differences depending on specific vehicle, market, options, etc.

#### Getting Started

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:  
[customerservice@034motorsport.com](mailto:customerservice@034motorsport.com)

#### Install Steps

##### Step 1

Open your hood.




##### Step 2

Using a flat blade screwdriver, release the 3 quarter-turn fasteners and remove the engine cover.



##### Step 3

Disconnect the coil harness connectors.

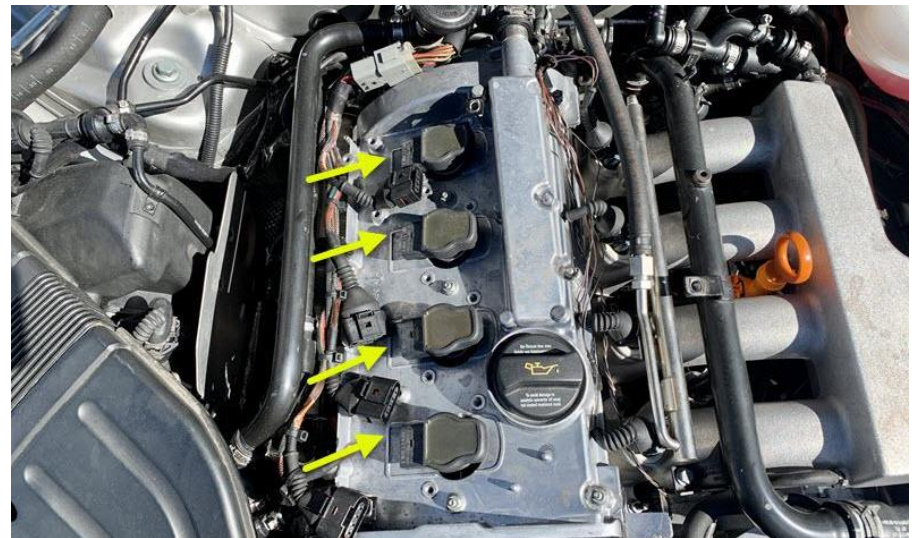



#### Step 4

Remove the coils by firmly pulling up on them.



#### Step 5

Slide the coils into the coil adapters.



#### Step 6

Install the newly mated coils and adapters into the valve cover and connect the harness.





**Step 7**

Steady the Coil hold down bracket with one hand and install tubes and align them with the coil adapters.

**Step 8**

Using the 4mm Allen, secure using the provided hardware. The spring will slide over the bolt threads, and sit above the hold-down bracket, locked in place by the flanged bolt head. Tighten until the spring is just shy of being fully compressed. The adapter plates may need to be manually adjusted to align with the threads in valve cover.



**You're done! Enjoy**