

[034Motorsport X34 Intake Duct, B9](#)**034 MOTOR SPORT**

034Motorsport's X34 Intake Air Duct for the B9 chassis is the new standard in performance and durability. This air duct was engineered with performance and great looks in mind. Manufactured from carbon fiber, for strength, light weight, and long lasting great looks.

Installation Spiciness Rating: MILD

Installation of your 034Motorsport X34 Carbon Fiber Air Duct for the Audi B9 is a straightforward process that will take approximately 15 minutes to complete.

Supplied Parts:

- X34 Carbon Fiber Air Duct
- (2x) M5x50 Screws

Tools Needed:

- T25 Torx
- 3mm Allen wrench

[About This Guide](#)

This Install Guide documents the installation process on a 2018 Audi S4 with the [034Motorsport X34 Cold Air Intake](#).

There may be minor differences depending on specific vehicle, market, options, etc.

[Getting Started](#)

Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

Install Steps


Step 1

Open the hood to access the hood release lever and radiator cover.



Step 2

Press the button on the back of the hood release lever and pull off the lever.

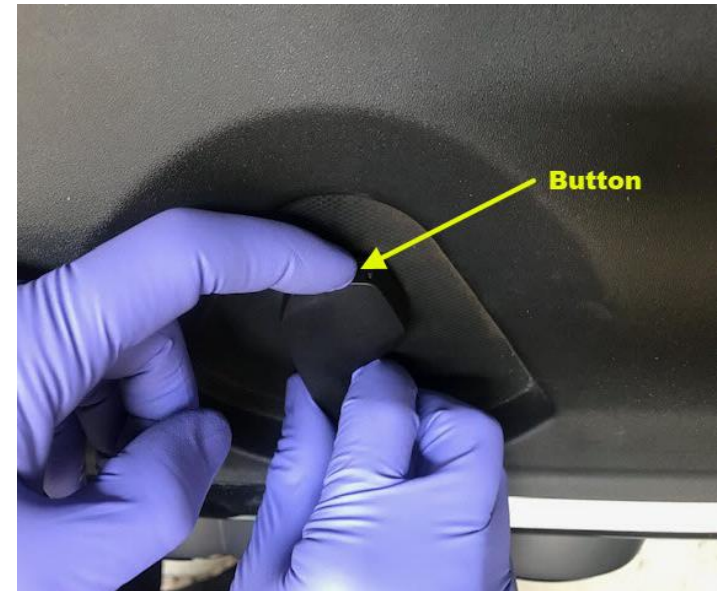

Step 3

Gently pry up on front edge of the radiator cover and slide out of rear slot to remove.



Step 4

Using a T25 Torx bit, remove the two screws attaching the stock duct.



Step 5

Remove the stock duct by sliding back, then to the right to disconnect from the airbox.




Step 6

Install the 034Motorsport X34 Carbon Fiber Intake Air Duct.



Step 7

Secure X34 Duct with provided M5x50mm button head cap screws. Torque to **3Nm**.

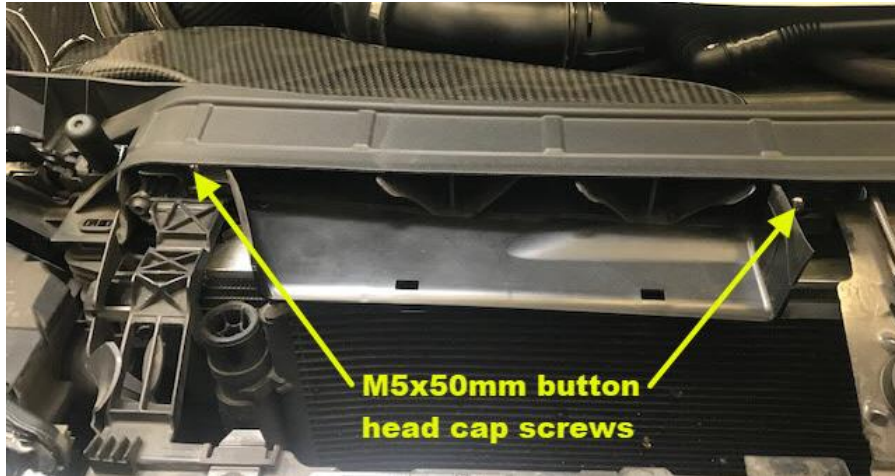**Step 8**

Reinstall radiator cover by sliding it into the rear slot and snapping the front edge down. Be careful to align front tabs to avoid breakage when snapping in.

**Step 9**

Reinstall hood release lever and admire your work!

