## Installation Guide



Turbo Inlet Kit, 8Y S3/Mk8 Golf R





The 034Motorsport Turbo Inlet for the 2.0 TFSI Gen4 in the Audi 8Y S3 and Mk8 Golf R is an essential upgrade to optimize power by eliminating a critical flow restriction in the intake tract. The turbo inlet is precision assembled and utilizes CNC-Machined 6061-T6 Aluminum Turbo Inlet Adapters that perfectly mate to allow smooth air entry into the compressor housing.

#### **Installation Spiciness Rating: MILD**









Installation of your 034 Turbo Inlet Kit is a straightforward process that should take approximately 30 minutes to complete.

#### **Supplied Parts:**

- 034 Turbo Inlet
- 034 Turbo Inlet Adapter Ring

#### **Tools Needed:**

- T30 Torx bit
- Flathead Screwdriver
- Small pick

#### **Getting Started**


Confirm you have received all the parts included with your purchase by reading the complete guide, if there are missing components, please contact:

customerservice@034motorsport.com

#### **About This Guide**

This Install Guide documents the installation process on an 8Y Audi S3. There may be minor differences depending on specific vehicle, market, options, etc.

\*Be sure to clean out any intake related components to remove any possible contaminants.






### **Install Steps**

Step 1

Open the hood.

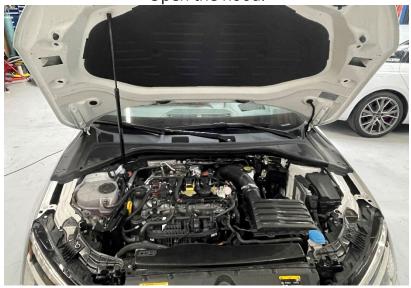

Step 2

Disengage the intake breather hose. It's on the underside.



#### Step 3

Using a flathead screwdriver, loosen both hose clamps for the intake hose. and disengage the hose from the stock inlet.





Step 4

Using a T30 Torx bit, remove the bolts securing the inlet to the turbo housing. The second bolt is behind the inlet.



## Installation Guide



**Step 5**Remove the stock turbo inlet.




**Step 6**Install the 034 Turbo Inlet.



Step 7

Using a T30 Torx bit, secure the 034 inlet with the factory hardware.

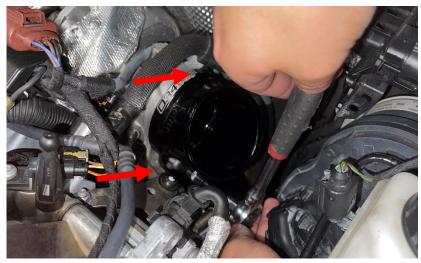

Step 8

Reinstall the intake hose. Using a flathead screwdriver, tighten both hose clamps.





# Installation Guide

**Step 9**Reinstall the intake breather hose.



**Step 10**Close your hood and enjoy the added performance.

